







ARCTIC GC PRO



Index


Package contents.....	2
Function Diagram.....	3
Function Diagram.....	4
Main console setup.....	5
Wireless controller setup.....	6
Motion controller setup.....	6
Add-on setup.....	7
Football controller setup.....	7
How to play.....	8
Game list.....	9
Precaution.....	10
Warranty.....	10
More on ARCTIC COOLING.....	10

Package Contents

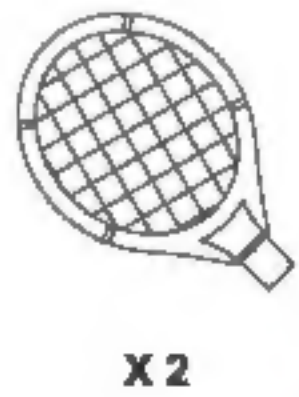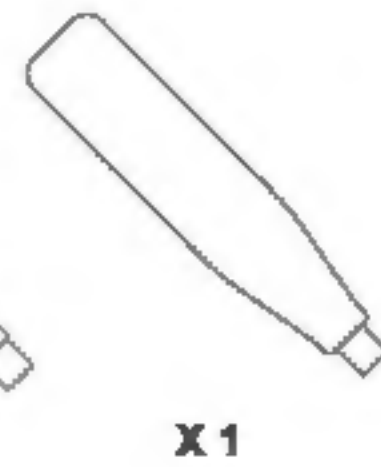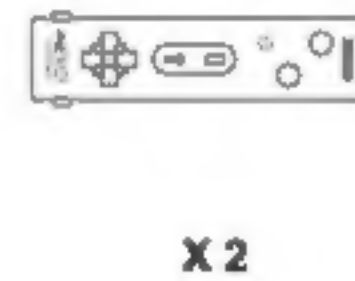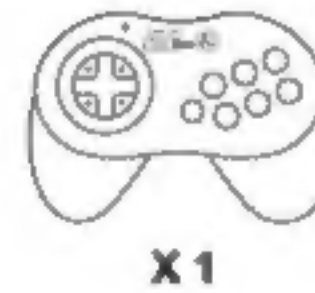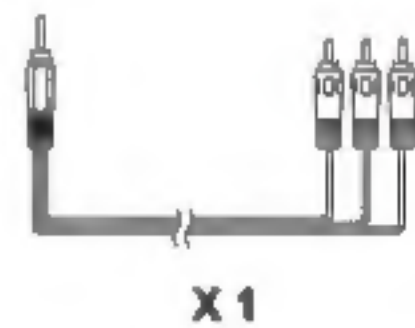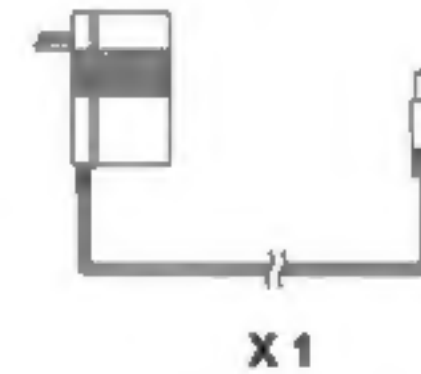

Function Diagram

Main Console

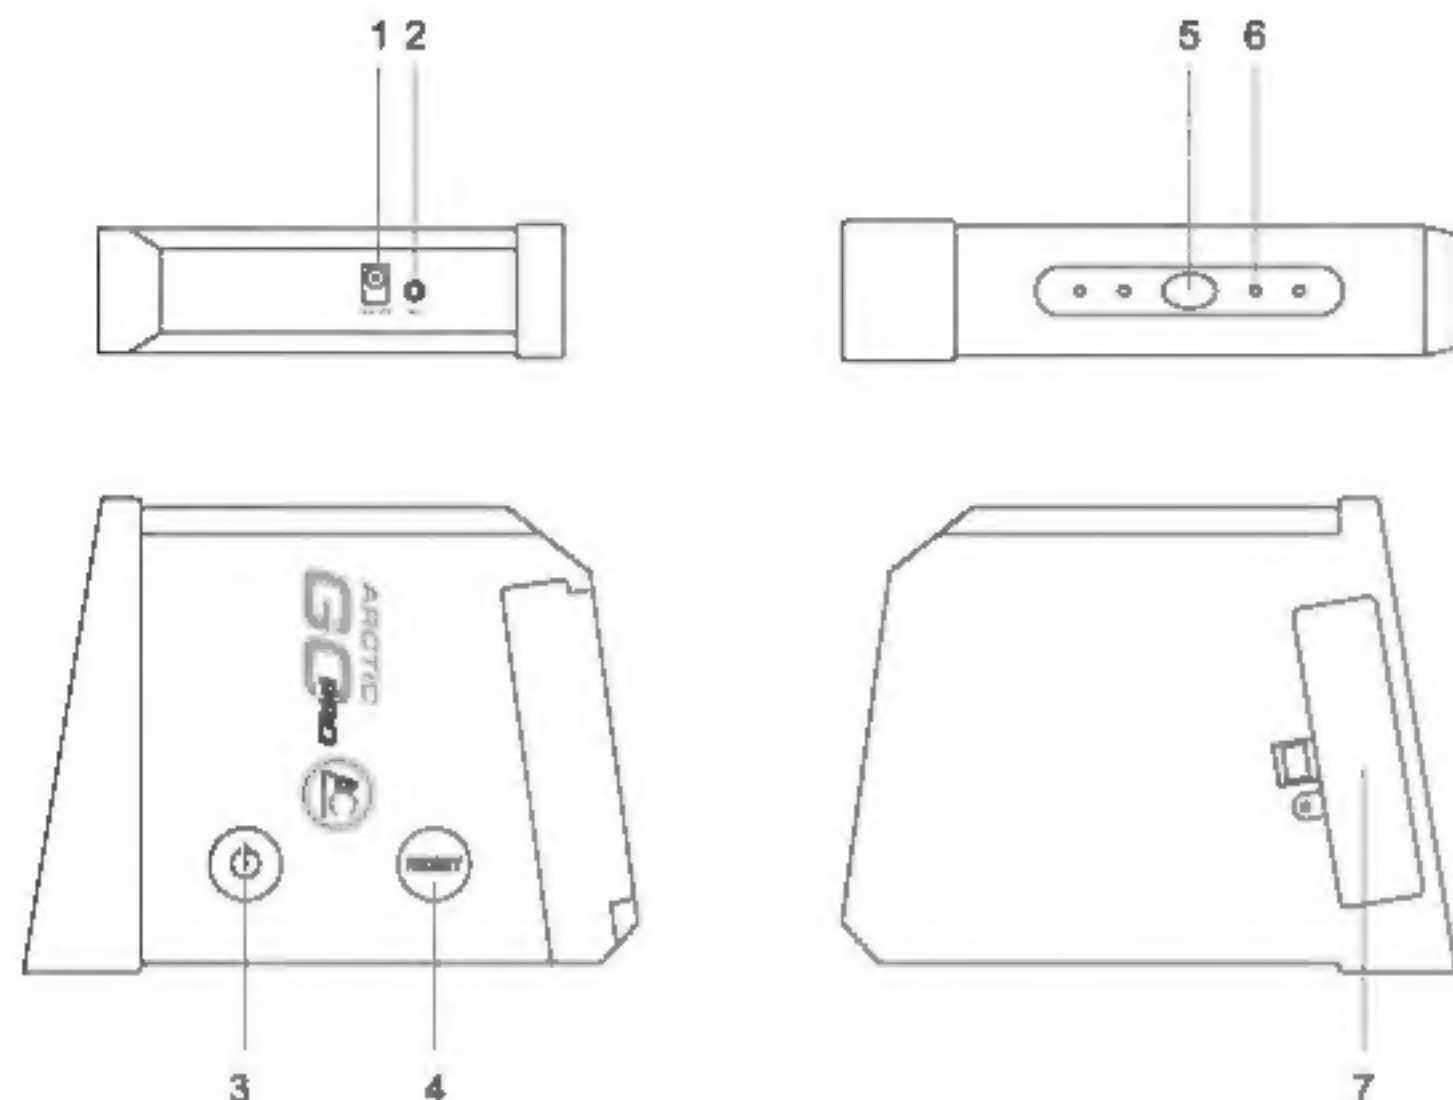


Main Console

- 1. DC input**
Connects to the AC adaptor
- 2. A/V output**
Connects to the black plug of the AV cable
- 3. Power button**
Press to turn the console ON or OFF
- 4. Reset button**
Press to restart the game console

- 5. Sensor**
Receives signal from the controllers
- 6. Power LED**
- 7. Battery cover**

Function Diagram


Wireless controller

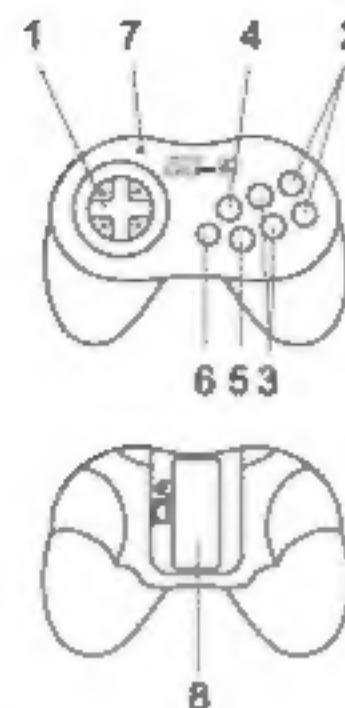

Wireless controller

- 1. Direction controller**
- 2. A button**
- 3. B button**
- 4. Select button**
- 5. Start button**
Press to turn ON the controller
*Turns off if inactivate for 3 mins
- 6. Reset button**
Press to restart the game console
- 7. Power LED**
- 8. Battery cover**

Motion controller

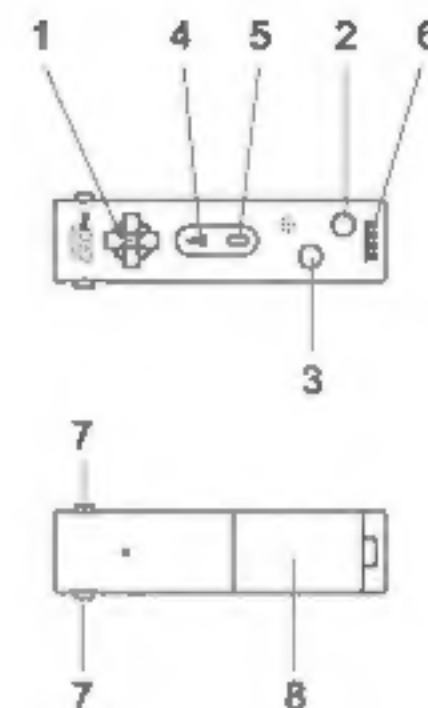

Motion controller

- 1. Direction controller**
- 2. A button**
- 3. B button**
- 4. Start button**
Press to turn ON the controller
*Turns off if inactivate for 3 mins
- 5. Select button**
- 6. Power LEDs**
- 7. Add-ons release button**
Press to unlock the add-ons
- 8. Battery cover**

Football controller




Football controller



- 1. Reset button**
Press to restart the game console
- 2. Battery cover**

Main console setup


1) Connect AV cable

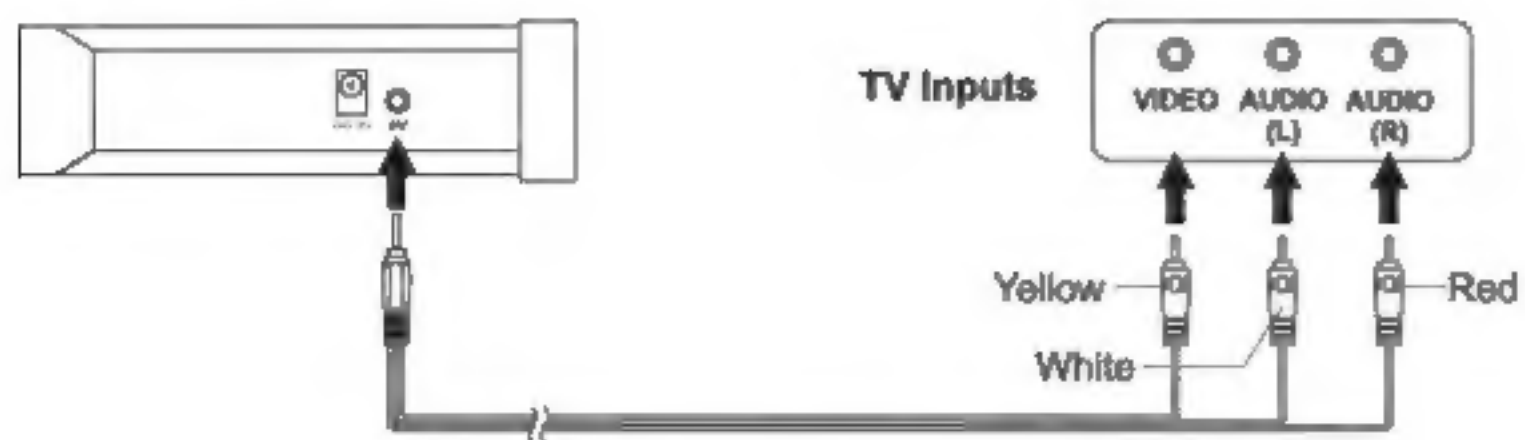



2) Power up the console by either (a) or (b)

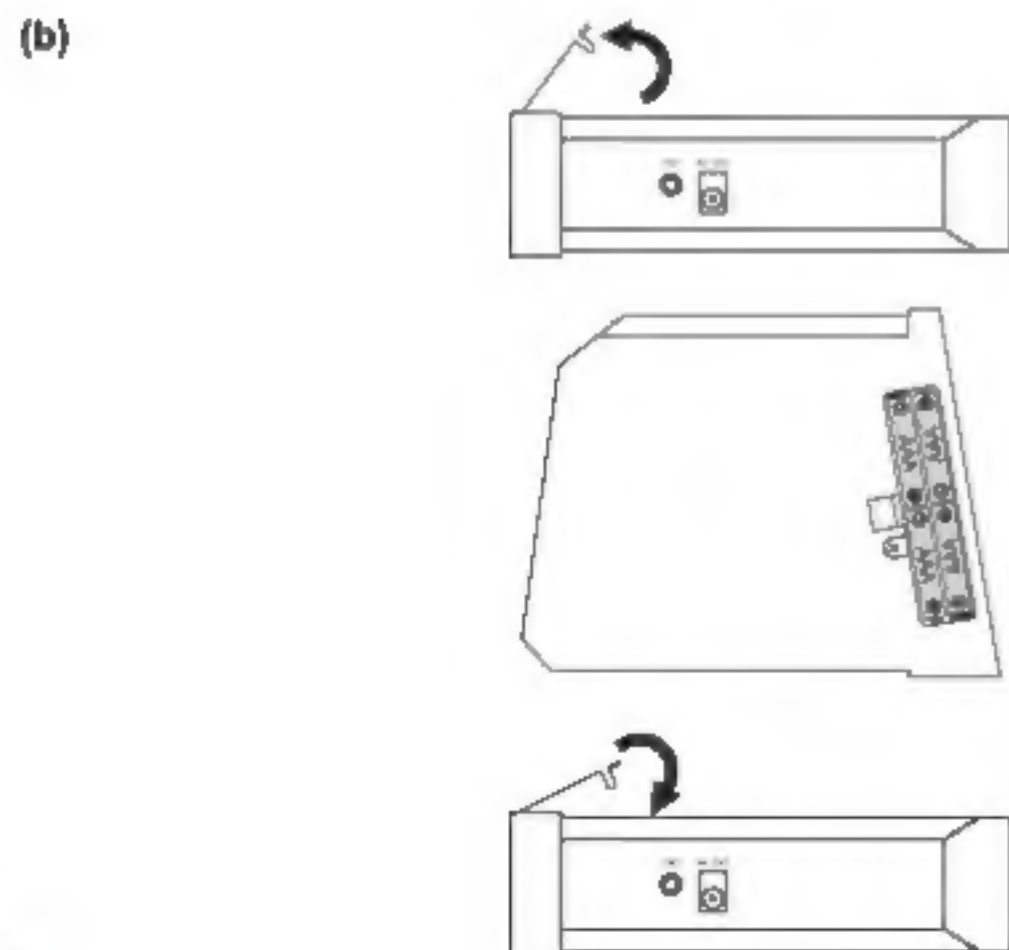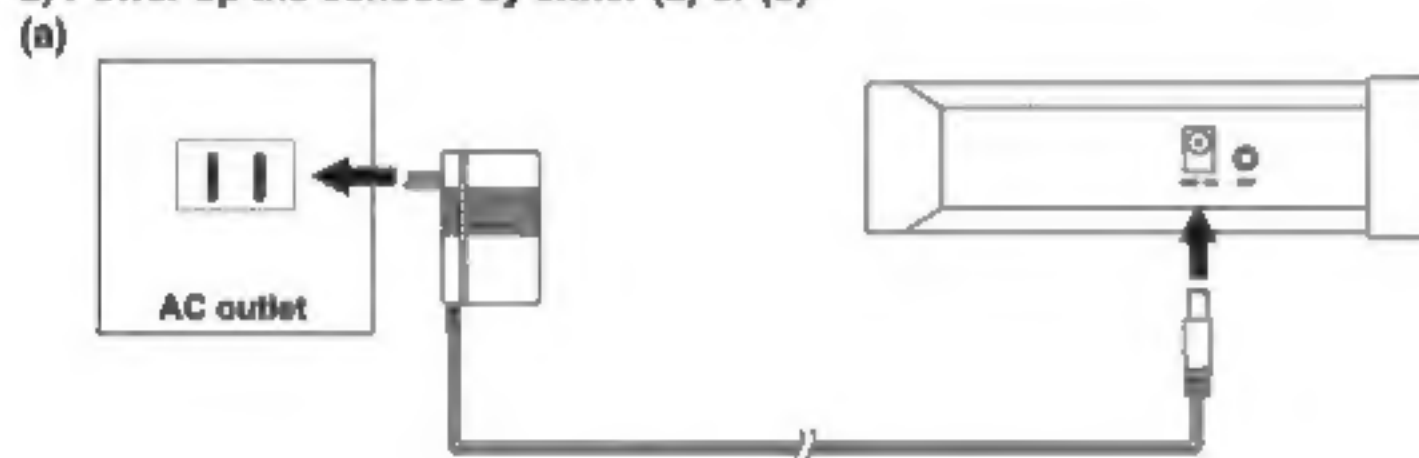

Wireless controller setup

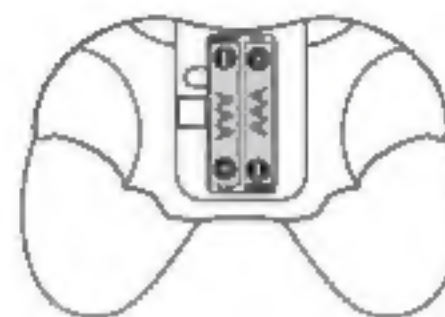


Motion controller setup

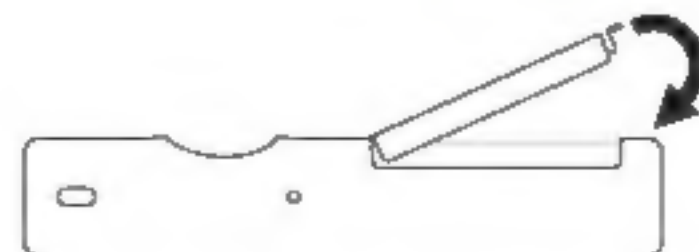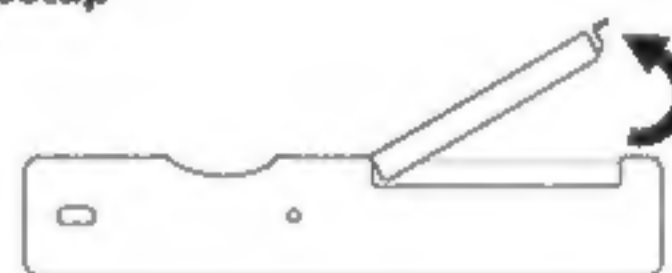


Add-on setup


Insert to the motion controller

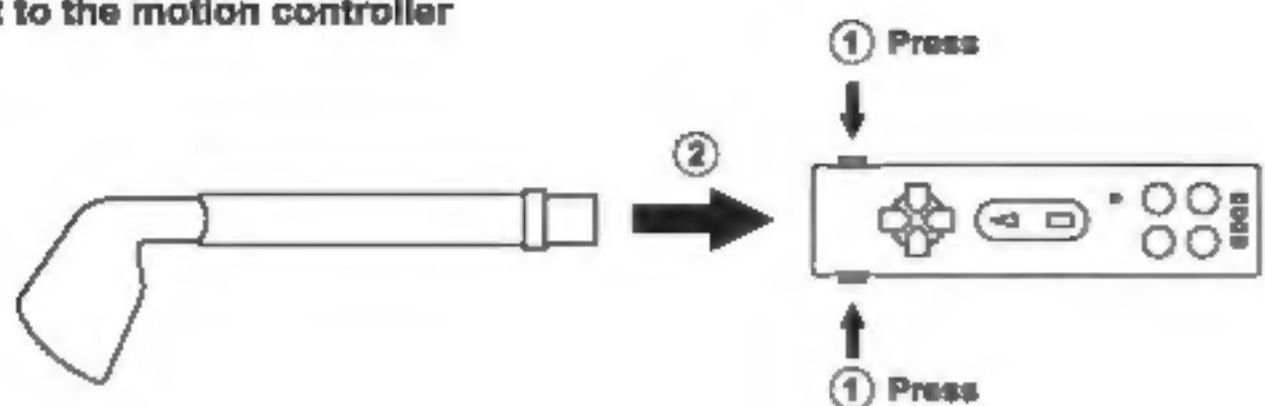

Remove from the motion controller

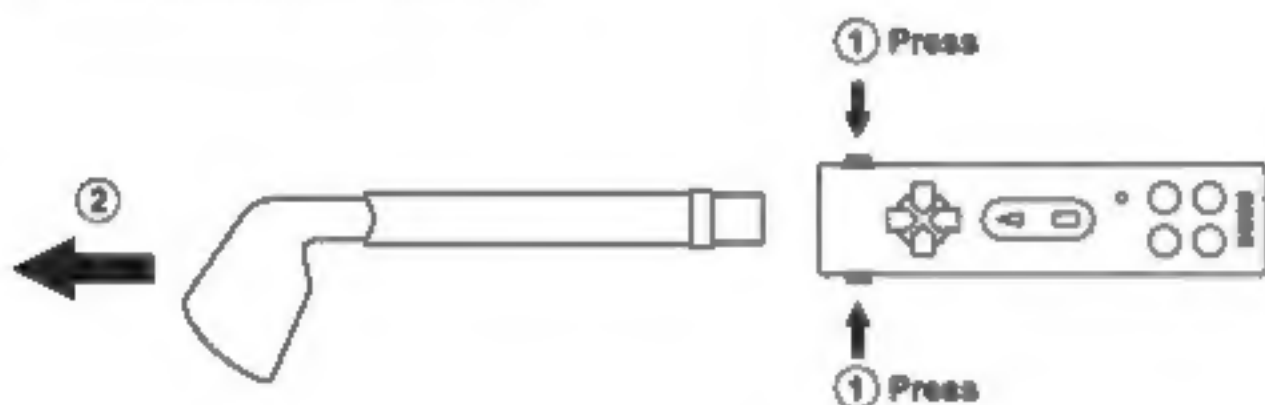


Football controller setup

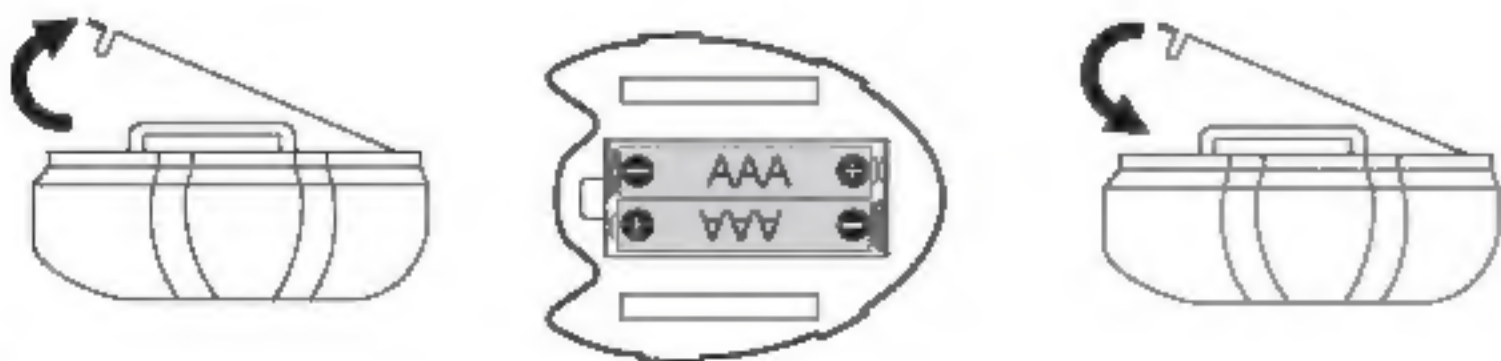


How to play

1) Press the power and start button respectively to turn on the main console and the controllers

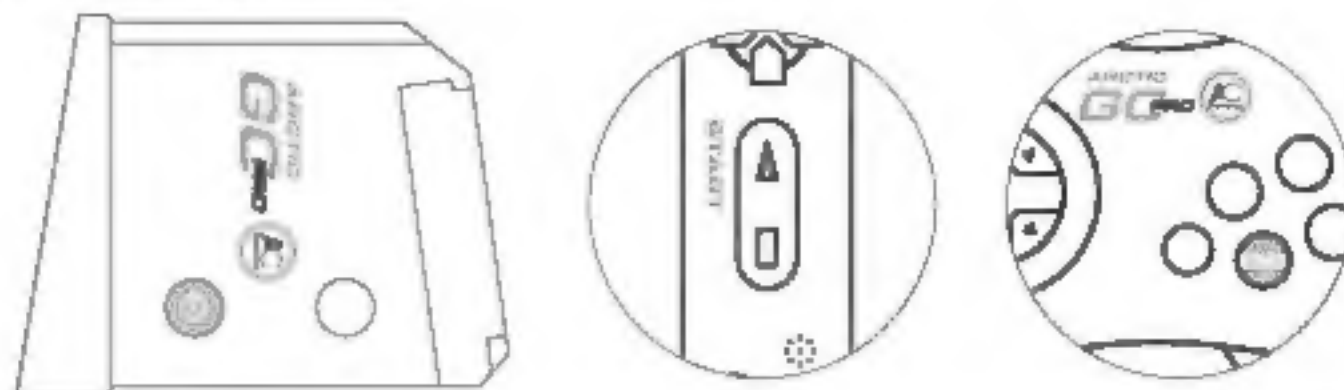


2) Press "left" or "right" to select the resolution and then press "A" to confirm

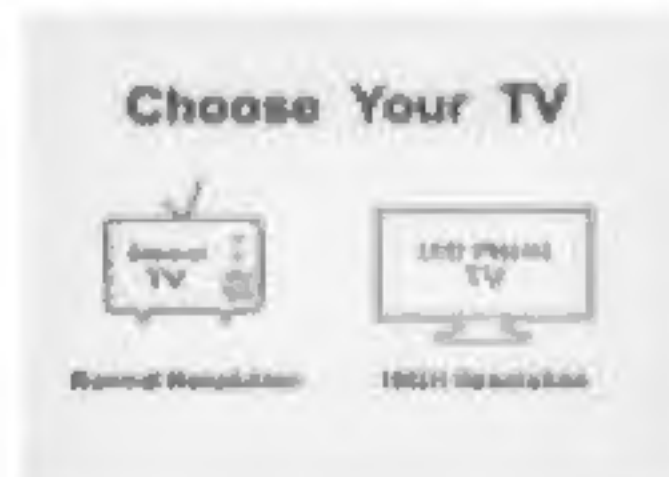

3) Press "left" or "right" to select the game



4) Press "start" to confirm

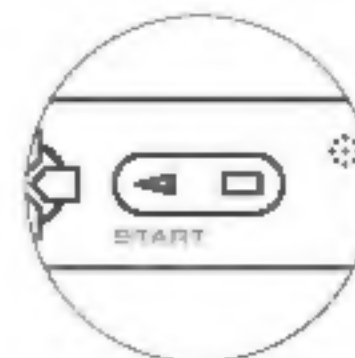

Game List

1) Tennis	17) Photo Match	33) Bubble Monster
2) Golf	18) Undersea Bubble	34) Malibu
3) Darts	19) Jewel Land	35) Maze
4) Running	20) Sky Up	36) Russian Blocks
5) Cooking	21) Cross Street	37) Puzzle
6) Soccer	22) Tower Ladder	38) Sudu
7) Sky Hawk	23) Grass Cutter	39) Heroic Pilot
8) Final Race	24) Bump Bump	40) Skiing
9) Motor Race	25) Space Defence	41) F1 Race
10) Horrific Collapsar	26) Magic Key	42) Super Motor
11) Space Warrior	27) Jewel Master	43) Baseball
12) Tank Tank	28) Undersea War	44) Fishing
13) Bomb Kid	29) Switch Man	45) Basketball
14) Magic Box	30) Thunder Race	46) Archery
15) Pipe Worker	31) Mine	47) Bowling
16) Speed Race	32) Railway Builder	48) Table Tennis

Precaution

Health

- 1) Take 10 to 15 minutes break every hour to avoid seizures, repetitive motion injuries or eyestrain.
- 2) Stop playing if you feel tired, sleepy or other discomfort.
- 3) Sit or stand as far from the screen as possible.
- 4) Stop playing and consult doctor if you continue to have discomfort during or after playing the game.

Safety

Game set

- 1) Avoid knock over, shaking or dropping the game set.
- 2) Keep the unit in a cool place.
- 3) Use the AC adaptor that comes with the game set only.
- 4) Stop using the AC adaptor or AV cable if it is damaged or broken.
- 5) The radio waves emitted by the main console and wireless controller can affect the operation of nearby electronics including medical devices.

While playing

- 1) Wear the wrist strap of the motion controller while gaming.
- 2) Make sure the add-ons are locked firmly on the controller before start playing.
- 3) Stay at least 1.5m away from the television and make sure you have enough space for playing.
- 4) Make sure no objects and people are within the play area.

TV screen

- 1) Do not leave the video games on hold for a long time.
- 2) Contact your TV manufacturer if you have any inquiries. ARCTIC COOLING will not be liable for any damage to your TV.

Batteries

- 1) Batteries are to be inserted with correct polarity, (+) and (-).
- 2) Exhausted batteries are to be removed from the controller.
- 3) Do not recharge non-rechargeable batteries.
- 4) Rechargeable batteries are only to be charged by an adult or under adult supervision.
- 5) Do not mix old and new batteries, different types of batteries (standard carbon-zinc, alkaline or rechargeable NiMH batteries)
- 6) The supply terminals are not to be short-circuited.
- 7) Remove all batteries in the controller if the ARCTIC GC Pro is not going to be played with for a long period of time.
- 8) Do not dispose of any batteries in fire. Batteries may explode or leak.

Warranty

This ARCTIC GC Pro comes with 2-year limited warranty

More on ARCTIC COOLING

Visit www.arctic-cooling.com for more information on their product and other ARCTIC COOLING products.